


HIGHEND Trackspot

B D Z Trackspot N01

[1] Pan / [2] Tilt

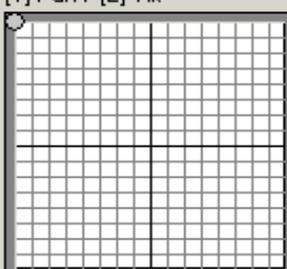

HIGHEND Trackspot

[7] Speed

Full
Rapide

Lent

[6] Dim.

[5] Strob.

Rapide

STOP

[3] Couleur



Rotation: Droite Gauche

PERSONALITY Switch 3=on

Rapide Lente Rapide

[4] Gobo



Rotation: Droite Gauche

PERSONALITY Switch 3=on

Rapide Lente Rapide

Detailed description: This is a control panel for a HIGHEND Trackspot projector. It features several sections for controlling different aspects of the light output. The top section includes a grid for Pan/Tilt control, a speed control slider (Full to Rapide), a lens control slider (Lent), a dimmer control slider (6), and a strobe control slider (5) with a stop button. The middle section is for color selection, with a row of color buttons and a rotation control slider (Droite/Gauche) for the color wheel. The bottom section is for gobo selection, with a row of gobo pattern buttons and a rotation control slider (Droite/Gauche) for the gobo wheel. A 'PERSONALITY Switch 3=on' label is present below the rotation sliders.